



Windows 98

Download & Extract Driver

1. Make sure CP9137 is **not** plugged in to your computer
2. [Click here](#) to download USB cable drivers
3. Run CP9137_Driver.exe. WinZip Self-Extractor runs.

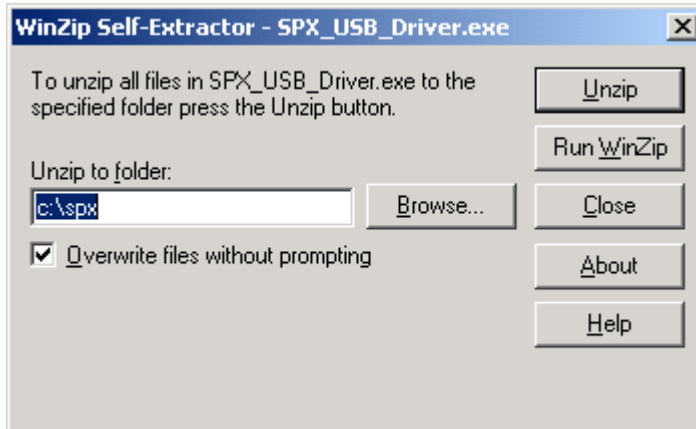

4. Click Unzip. We recommend unzipping to the default directory (c:\spx). WinZip extractor informs the user when it is complete.
5. Click OK, then Close.
6. Attach cable to tool and plug into PC
7. Windows **Add New Hardware Wizard** will launch to install the **SPX USB to UART Serial Bridge Controller**.

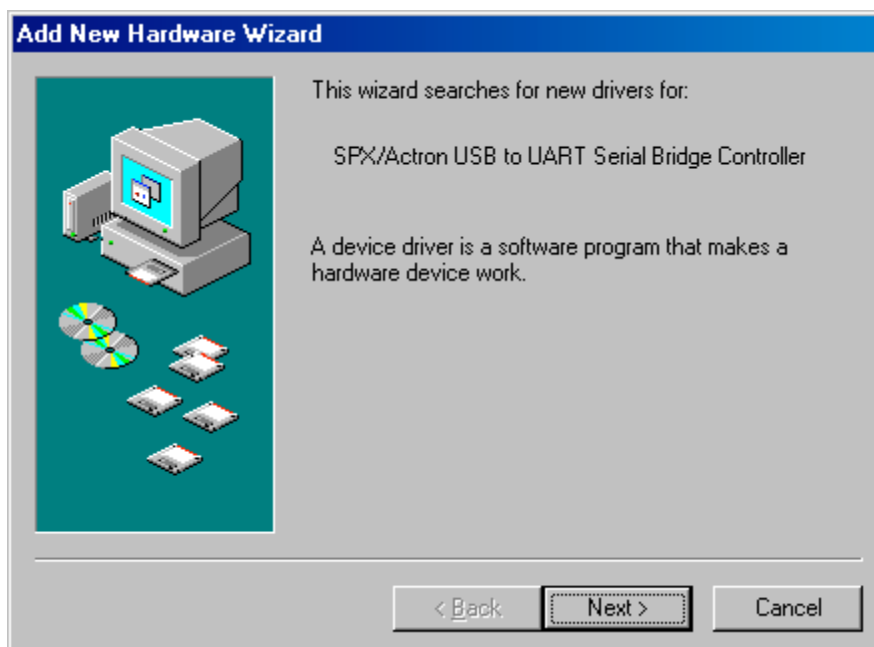

8. Click Next.
9. Make sure **Search for the best driver for your device (recommended)** is selected. Click Next
10. Check only **Specify a location** and specify the location the driver downloaded from the web was extracted. Uncheck all other boxes.
11. Windows will find the driver. Click Next
12. When Windows finishes installing the driver, click Finish.
13. Windows will find new hardware two more times. Repeat “Step 7” through “Step 12” two times