



## Windows 2000/XP

### Download & Extract Driver

1. Make sure CP9137 is **not** plugged in to your computer
2. [Click here](#) to download USB cable drivers
3. Run CP9137\_Driver.exe. WinZip Self-Extractor runs.

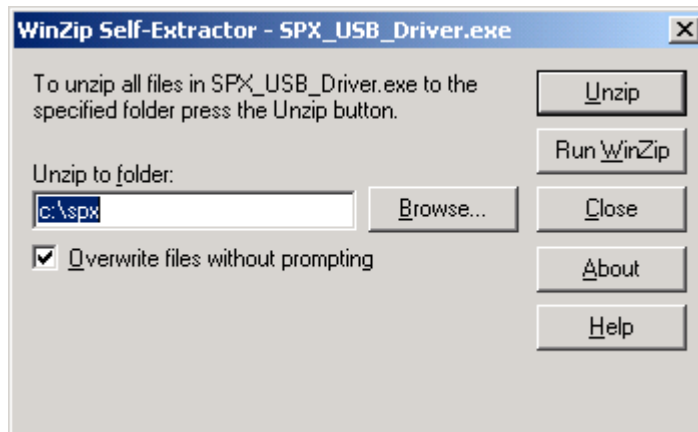

4. Click Unzip. We recommend unzipping to the default directory (c:\spx). WinZip extractor informs the user when it is complete.
5. Click OK, then Close.
6. From c:\spx, run PreInstaller.exe.

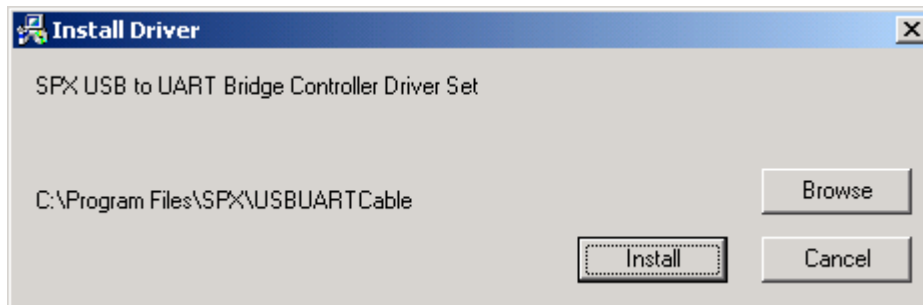

7. Click Install. It is best to use the default location to install the drivers. You will be informed when the installation is successful.
8. Click OK.
9. Attach cable to tool and into the PC.
10. Windows will find new hardware, and will automatically install the drivers.